


Royal Theatre Magic Sheet

PATCHED


FRONT GOLD (L151) G901

*Denotes Far Position

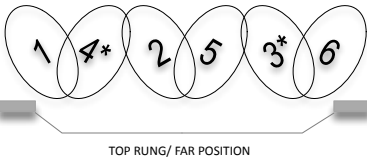


FRONT LAV (L136) G902

*Denotes Far Position

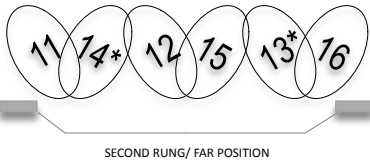


FRONT BLUE (L161) G903


*Denotes Far Position

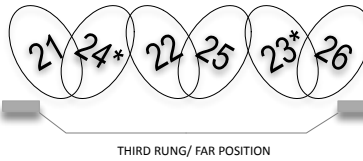


FRONT SCROLLERS G904

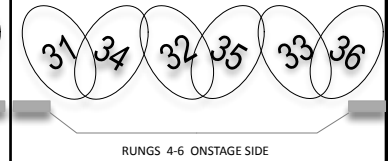


FRONT 1/2 CTB. (LEE 202) G905

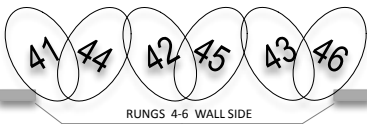

FAR FOH RED (L106) G906

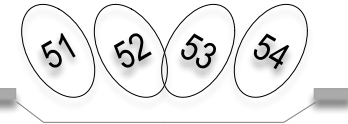


FAR FOH BLUE (R80) G907

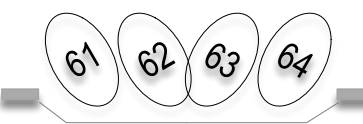

SCROLLER COLOURS

1	R00	9	R80
2	R64	10	R95
3	R08	11	R358
4	R34	12	R83
5	R51	13	R26
6	R17	14	R39
7	R44	15	R19
8	R57	16	R310

 FOH LADDER SPECIALS G908




FAR FOH SPECIALS (N/C) G909




WARMERS (L151) G910




TIP ZOOMS (N/C) G911

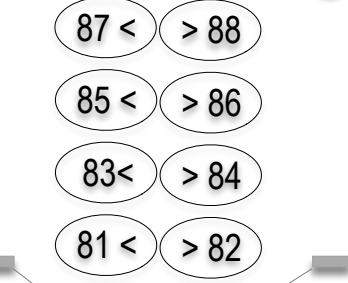


TIP 26 DEG (L202) G912

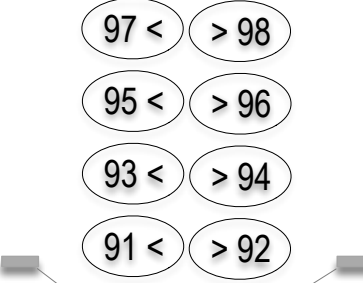


TIP SCROLLERS G913

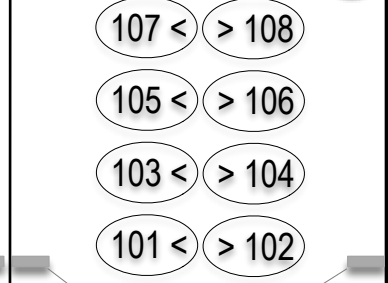


CONDUCTOR (N/C) G919

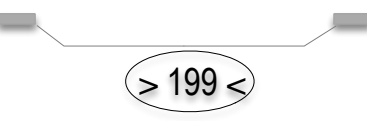


TOPS GOLD (L151) G914

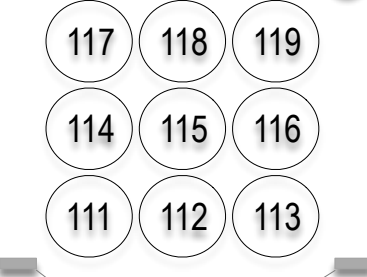


TOPS BLUE (L132) G915

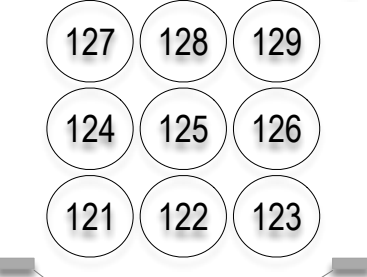

TOP PARS (N/C) G916

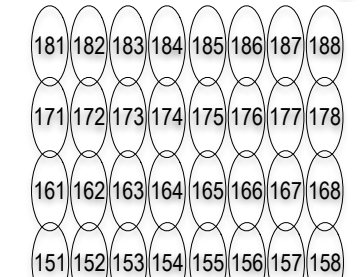

TOP SPECIALS (N/C) G917

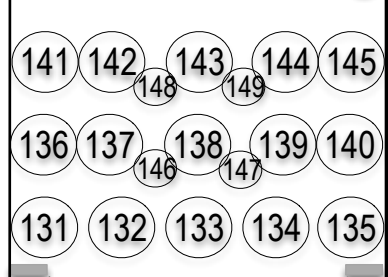


TOP CYC LED (RGB) G925



FX316 FX315 FX314 FX313 FX312 FX311 FX310 FX309

 GROUND CYC LED (RGB) G926



FX308 FX307 FX306 FX305 FX304 FX303 FX302 FX301

VL 500 WASH G927



FX108 FX107 FX106 FX105



FX104 FX103 FX102 FX101

 
VL 1000 ERS G928



FX13 FX12 FX11



FX10 FX9




FX8 FX7 FX6 FX5



FX3 FX1 FX4 FX2

I-CUE LISTR S4 LED G931 & DMX IRIS

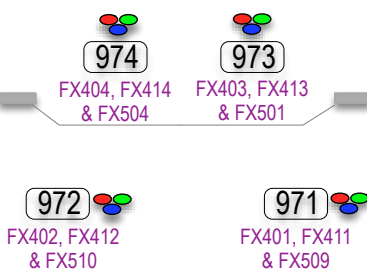

FX404, FX414 & FX504; FX403, FX413 & FX501; FX402, FX412 & FX510; FX401, FX411 & FX509


STAGE WORKS G920



MDG THE ONE



ARCHITECTURAL LED LIGHTING G936

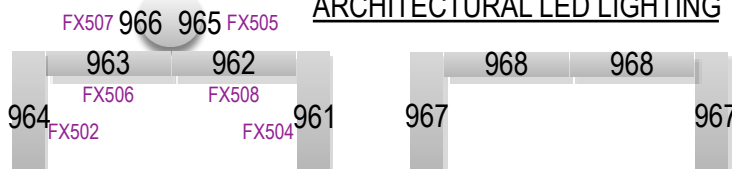

PROSCENIUM & ROSETTE

PROSCENIUM & VALENCE

HL & HR Box Torches